



### AMBIANCE TECHNICAL SPECIFICATIONS

	AMBIANCE 15	AMBIANCE 30	AMBIANCE E
Dimensions (L x W x H)	3.31" x 3.25" x 8.5" (84mm x 82.5mm x 216mm)	3.31" x 3.25" x 8.5" (84mm x 82.5mm x 216mm)	3.31" x 3.25" x 8.5" (84mm x 82.5mm x 216mm)
Weight	15 oz (427 grams)	15 oz (427 grams)	26.4 oz (749 grams)
Material	ABS & PC Tray	ABS & PC Tray	ABS & PC Tray
Power Supply	Battery—1.5 volts	Battery—3.0 volts	Electric
Power Requirements	1 or 2 "D" (LR-20) alkaline batteries	2 "D" (LR-20) alkaline batteries	AC adapter—included 120 volts/60 Hz or 230 volts/50 Hz
Fan Speed (no load)	800 rpm (4 blades)	1600 rpm (4 blades)	1600 rpm (4 blades)
Coverage	2,400 ft <sup>3</sup> (68.5 m <sup>3</sup> )	4,000 ft <sup>3</sup> (116 m <sup>3</sup> )	$4,000 \text{ ft}^3 (116 \text{ m}^3)$
Shipping Weight (case)	6 units: 6 lbs (2.72 kg) 24 units: 25 lbs (11.34)	6 units: 6 lbs (2.72 kg) 24 units: 25 lbs (11.34)	6 units: 8 lbs (3.62 kg) 24 units: 34 lbs (15.42)

# FRAGRANCE SUPPORT

Liquid	In cans, in bulk with aluminium can or plastic containers, and essential oils on ceramic or fiberboard
Solid	In cans, scented ceramic discs, gels, and organic wafers (fiberboard)

# AMBIANCE LOCKING DEVICE

A hex screw and Allen key are provided with each Ambiance air freshener dispenser to lock the unit and prevent tampering.

#### LOCKING THE DISPENSER

- 1. Open the front cover by pressing the button at the top of the unit.
- 2. With the Allen key, insert the hex screw in the hole under the button and turn until the screw is all the way in (fig. 1). Do not force the screw.
- 3. Replace the front cover.
- 4. Unscrew the hex screw by turning counter-clockwise four (4) full turns or until the screw prevents the removal of the front cover (fig. 2).

### **UNLOCKING THE DISPENSER**

- 1. With the Allen key, turn the hex screw until it is all the way in. Do not force the screw.
- 2. Open the front cover by pressing the button at the top of the unit.

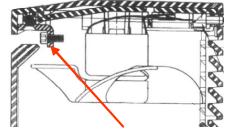


Fig. 1 — Unlocked

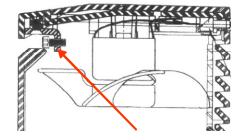


Fig. 2 - Locked

